

WATER SENSITIVE URBAN DESIGN (WSUD) SYSTEMS

- 1

= PRIMARY TREATMENT – GROSS POLLUTANT TRAPS & SILT SETTLEMENT.
- 2

= SECONDARY TREATMENT – INFILTRATION & NUTRIENT STRIPPING VIA SWALES, BROOKS & PERMEABLE PAVEMENTS.
- 3

= TERTIARY TREATMENT – SETTLEMENT & NUTRIENT PATHOGEN REMOVAL.


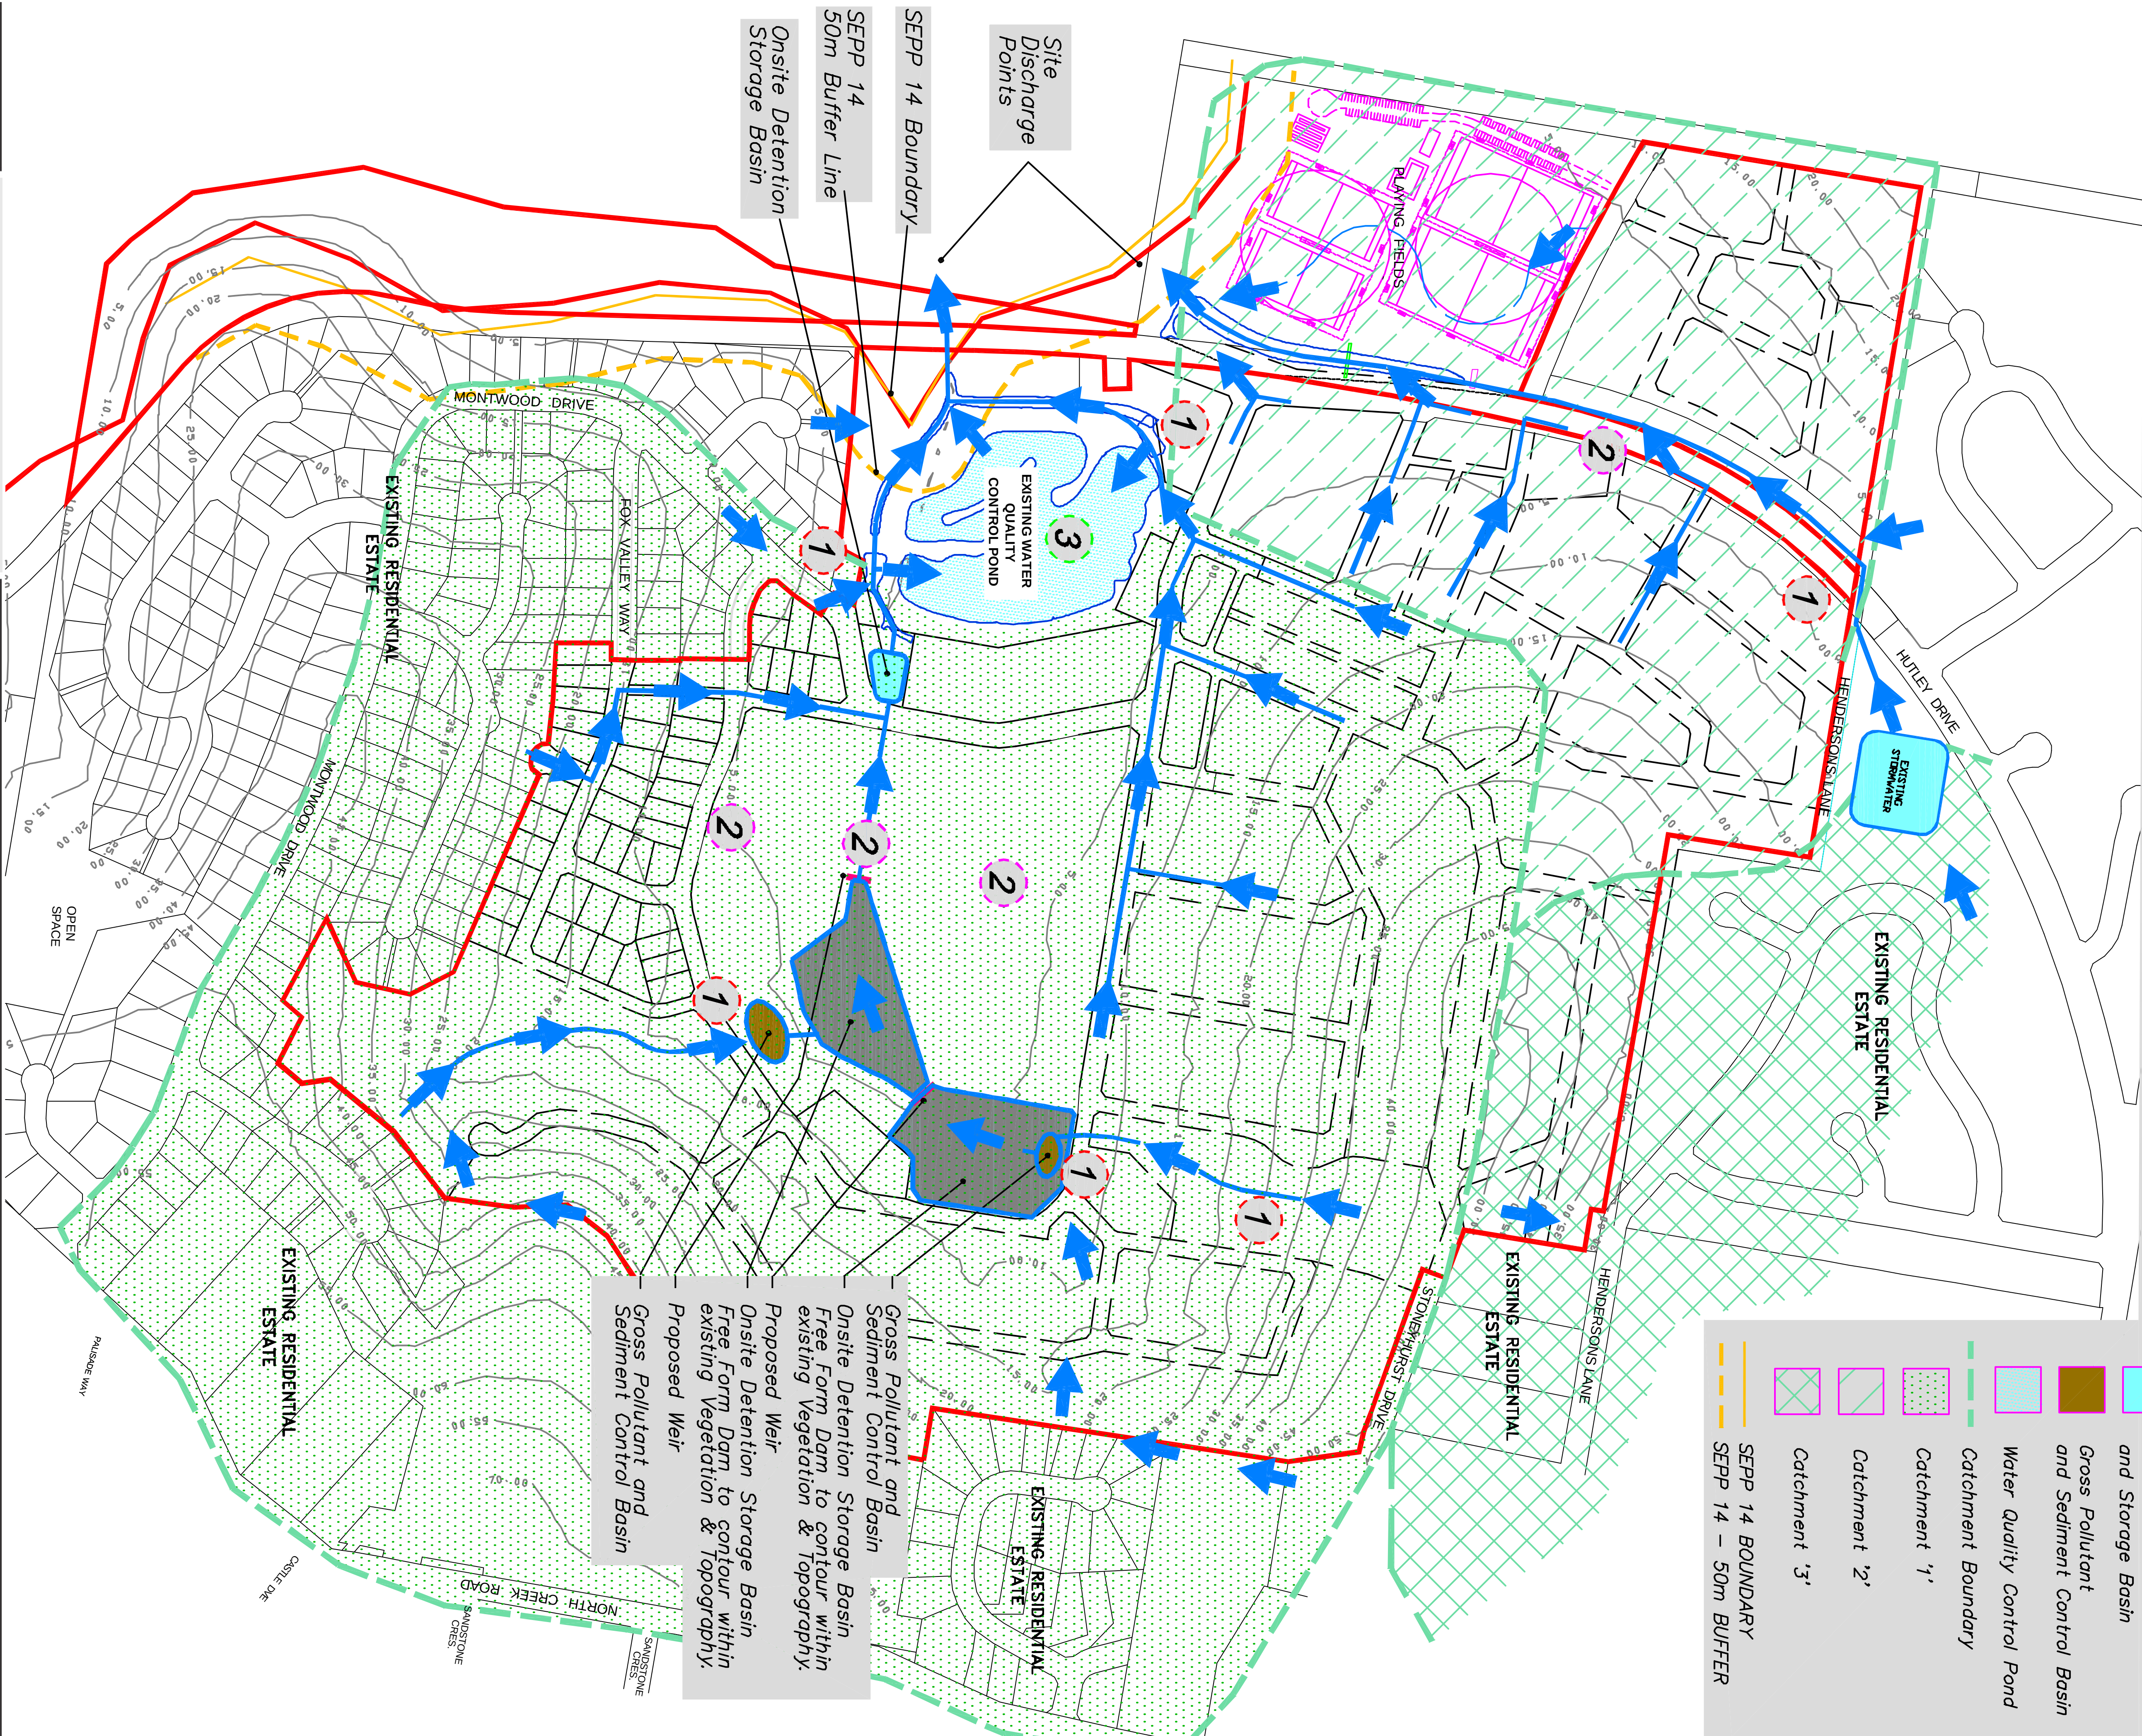


ILLUSTRATION C7 - STORMWATER CONCEPT PLAN

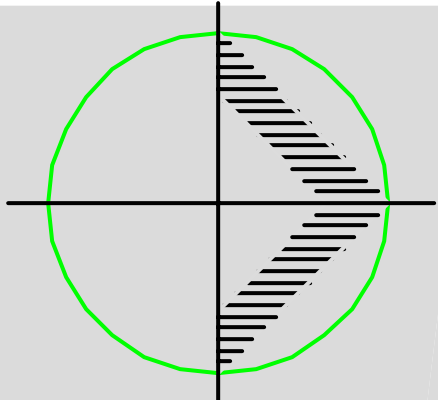